Ĵ 8 000 0 ª 0 Ŷ 0 A 00 Ð 4 0 αØ Ð JUJ Л Ş 12 10 ģ 11 13 1'4 1'5 1'6

 
COMPONENT	QTY
COVER	1
DIFFUSER	1
SCREW	1
INNER DIFFUSER	1
LIGHT SOURCE - LED MODULE	1
SCREW	1
CONTROL GEAR - PSU	1
BASE	1
SCREW	2
CLAMPER	1
SCREW	1
TERMINAL BLOCK	1
SCREW	2
CLOSED END CONNECTOR	1
CONTROL GEAR - SENSOR	1
SCREW	2
	COVER DIFFUSER SCREW INNER DIFFUSER LIGHT SOURCE - LED MODULE SCREW CONTROL GEAR - PSU BASE SCREW CLAMPER SCREW TERMINAL BLOCK SCREW CLOSED END CONNECTOR CONTROL GEAR - SENSOR

<u>Warnings</u> Always make sure the luminaire is detached from the mains socket Always make sure the DC cable is detached from the power supply Staring at the operating light source may cause eye injury

#	Disassemble/dismantle steps	Tools needed
а	REMOVE COVER (1) AND DIFFUSER (2) BY UNSCREWING THE SCREWS (13)	CROSS HEAD SCREW DRIVER
b	REMOVE CLAMPER (10) BY UNSCREWING THE SCREWS (9)	CROSS HEAD SCREW DRIVER
С	REMOVE TERMINAL BLOCK (12) BY UNSCREWING THE SCREW (10)	CROSS HEAD SCREW DRIVER
d	REMOVE WIRE OF THE CONTROL GEAR - PSU (7) AND WIRES OF THE CONTROL GEAR - SENSOR (14) FROM THE TERMINAL BLOCK (12) BY UNSCREWING THE TERMINAL BLOCK (12)	FLAT HEAD SCREW DRIVER
е	REMOVE THE CLOSED END CONNECTOR (14)	PINCER
f	REMOVE INNER DIFFUSER (4) BY UNSCREWING THE SCREW (3)	CROSS HEAD SCREW DRIVER
g	REMOVE WIRES OF THE CONTROL GEAR -PSU (7) FROM THE LIGHT SOURCE - LED MODULE (5)	SOLDER IRON
h	REMOVE THE CONTROL GEAR - PSU (7) FROM THE BASE BY UNSCREWING THE SCREWS (6)	CROSS HEAD SCREW DRIVER
i	REMOVE THE CONTROL GEAR - SENSOR (15) FROM THE BASE BY UNSCREWING THE SCREWS (16)	CROSS HEAD SCREW DRIVER
	DESCRIPTION	SIGN ID

	STATUS	DESCRIPTION			
			R wall lantern anthracite 1x6 wall lantern black 1x6W 230V		
2021-04-12				-	
	NAME WH		LOCAL PART ID	sн. 1	
	CHECKED		DATE		

SKU	Color	Country
915005193001	BLACK	EU
915005197201	BLACK	EU



	DESIGN ID DOC 12NC		
	SH.		A3-P
	CONFIDENTIAL, PROPERTY OF: © 2020 Signify Holding		