

| # | COMPONENT | QTY |
|----|---------------------------|-----|
| 1 | COVER | 1 |
| 2 | DIFFUSER | 1 |
| 3 | SCREW | 4 |
| 4 | LIGHT SOURCE - LED MODULE | 1 |
| 5 | SCREW | 2 |
| 6 | CONTROL GEAR - PSU | 1 |
| 7 | SCREW | 2 |
| 8 | CLAMPER | 1 |
| 9 | PLATE | 1 |
| 10 | SCREW | 4 |
| 11 | TERMINAL BLOCK | 1 |
| 12 | BASE | 1 |
| 13 | SCREW | 2 |
| 14 | CONTROL GEAR - SENSOR | 1 |
| 15 | SCREW | 2 |
| 16 | CLOSED END CONNECTOR | 2 |

Warnings
Always make sure the luminaire is detached from the mains socket
Always make sure the DC cable is detached from the power supply
Staring at the operating light source may cause eye injury

| # | Disassemble/dismantle steps | Tools needed |
|---|---|-------------------------|
| а | REMOVE BASE (12) BY UNSCREWING THE SCREWS (13) | CROSS HEAD SCREW DRIVER |
| b | UNSCREW WIRES FROM THE TERMINAL BLOCK (11) | FLAT HEAD SCREW DRIVER |
| С | REMOVE THE CLOSED END CONNECTORS (16) | PINCER |
| d | REMOVE CONTROL GEAR - SENSOR (14) BY UNSCREWING THE SCREWS (15) | CROSS HEAD SCREW DRIVER |
| е | REMOVE COVER (1) AND DIFFUSER (2) BY UNSCREWING THE SCREWS (10) | CROSS HEAD SCREW DRIVER |
| f | REMOVE LIGHT SOURCE - LED MODULE (4) BY UNSCREWING THE SCREWS (3) | CROSS HEAD SCREW DRIVER |
| g | REMOVE WIRES OF THE CONTROL GEAR - PSU (6) FROM THE LIGHT SOURCE - LED MODULE (4) | SOLDER IRON |
| h | REMOVE THE CLAMPER (8) BY UNSCREWING THE SCREWS (7) | CROSS HEAD SCREW DRIVER |
| i | REMOVE THE CONTROL GEAR - PSU (6) BY UNSCREWING THE SCREWS (5) | CROSS HEAD SCREW DRIVER |

| SKU | Color | Country | |
|--------------|-----------|---------|--|
| 915005554501 | DARK GREY | EU | |

| S | TATUS | DESCRIPTION | | | | DESIGN ID | | |
|------------|-------|-------------|---|--|---|-----------|--|------|
| | | Samondra | amondra IR wall lantern anthracite 1x12 | | | DOC 12NC | | |
| 2021-04-12 | | | | | | | | |
| NAME | JZ | • | LOCAL PART ID | | SH. 1 | SH. | | A3-P |
| CHECKED | | | DATE | | CONFIDENTIAL, PROPERTY OF: © 2020 Signify Holding | | | |